



Vicwon Foam Groove Cutting Sled

1. Installation


1" left margin for straight angle blades

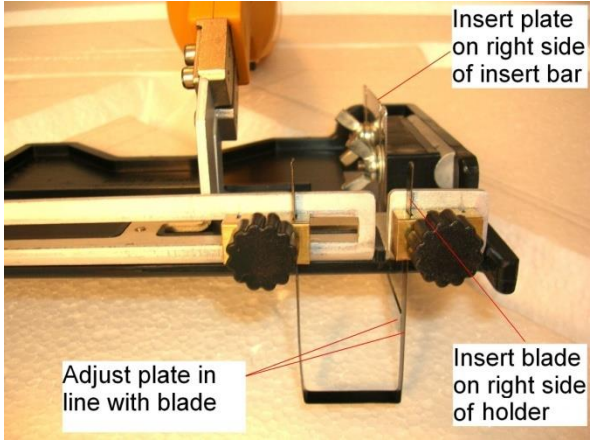


1" left margin for bevel angle blades

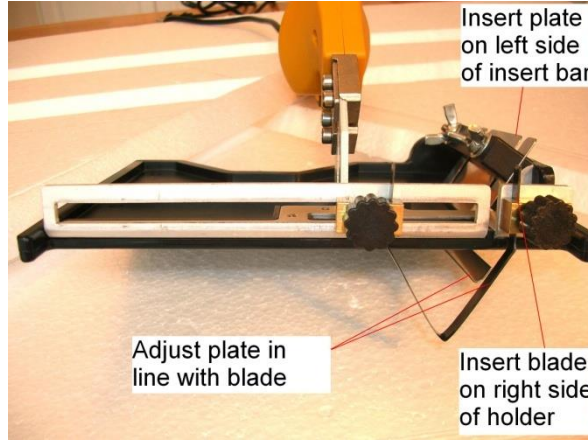


1/2" left margin for straight angle blades having width ≥ 3/4"

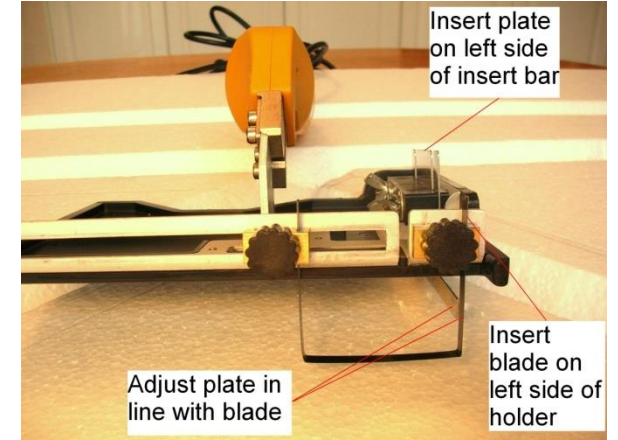

2. Cutting

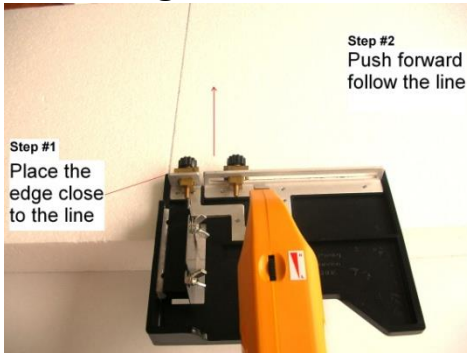

Bevel Grooves bottom view

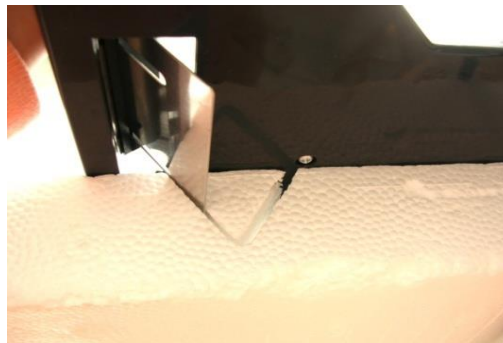

Straight Angle Grooves bottom view

